



3600 North Duke Street, Suite 39B
Durham, NC 27704
Phone: (919) 620-6840
Fax: (919) 620-6843
Emergency Contact: (919) 201-7973

CHOCOLATE FOUNTAIN INSTRUCTION SHEET

Operating Instructions

1. Place the fountain on a level surface, using the bubble level at the back of the base unit to ensure proper placement. If needed, use the three adjustable feet to achieve the correct leveling. Turn feet clockwise to raise and counter-clockwise to lower.
2. Plug the fountain into a 120V outlet and move switch to the "preheat" position. For best results, allow appliance to preheat for approximately 10 minutes. **Do not operate fountain in preheat mode when serving!**
3. While base unit is preheating, carefully melt 4 pounds of chocolate in microwave or double-boiler. **Do not try to melt chocolate using the fountain.** Be sure the chocolate is completely melted before using. Ideal operation requires 4 pounds of chocolate.
4. After fountain is preheated, pour the melted chocolate into the metal bowl and turn the knob to "flow."
5. Add additional melted chocolate as needed, following the same instructions for preparation of the chocolate.
6. Keep the fountain in the "flow" position until the fountain is no longer needed. Do not allow the chocolate to harden in fountain. **Never leave the appliance unattended while it is on.**

Cleaning Instructions

1. Turn the fountain "off" and unplug from wall outlet.
2. Allow the fountain to cool before cleaning, but do not allow any chocolate to harden in the bowl as this may damage the unit.
3. Remove and disassemble the screw auger and center tube pieces. Place them in the dishwasher, top rack, or wash by hand in hot, soapy water.
4. Dispose of any unused chocolate while it is still melted and fluid. Allowing the chocolate to harden and then removing it can damage the fountain and make the appliance unusable. **Never pour melted Chocolate down the drain!** Always dispose of excess chocolate in the garbage as melted chocolate can clog pipes and damage plumbing.
5. Wipe inside of metal bowl with damp cloth or sponge, repeating until all food residue is removed and bowl is clean. Wipe exterior of the bottom unit with a damp cloth or sponge and wipe dry. **Never immerse electrical unit in water.**

In the event that the equipment fails, please do not attempt to repair it yourself, instead, please contact the emergency phone number above for further assistance.